

SHARE
Technology • Connections • Results

Dynamically Managing Hardware I/O Configuration Using VM

Rick Barlow
Nationwide Insurance
E-mail: Richard.Barlow@nationwide.com

February 27, 2008
Session 9134



Disclaimer




The content of this presentation is for information only and is not intended to be an endorsement by Nationwide Insurance. Each site is responsible for their own use of the concepts and examples presented.

Topics



- Benefits of Dynamic Configuration
- Elements of Dynamic I/O Configuration
- Dynamically Changing your I/O Configuration
 - HCD
 - Native VM commands

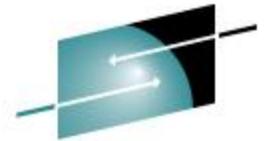

Dynamic I/O Configuration

- Modify the hardware I/O definitions (IOCDs) without an outage
 - Native VM CP commands
 - New with VM/ESA Version 2 Release 1.0 – GA October 1995
 - Commands based on hardware requirements
 - Add, change, delete CHPID, CNTLUNIT, IODEVICE
 - Modify the software view of I/O definitions
 - *Reset I/O control blocks*
 - *Devices that do not support Sense commands*
 - *Clear control blocks of devices with errors*
 - VM HCD and HCM
 - New with z/VM Version 4 Release 4.0 – GA August 2003
 - Manage I/O definitions for all LPARs on a processor

Comparisons Between Native VM Commands and HCD




- VM dynamic tightly linked to hardware requirements - **only**
 - z/OS HCD must also meet z/OS requirements
- VM uses simple line commands
 - VM HCD uses HCM
 - z/OS HCD uses either:
 - ISPF panels (and multiple entries and confirmations)
 - HCM
- VM commands permit *all* changes allowed by hardware
 - HCD imposes restrictions
 - Safeguards in HCD to help avoid mistakes
 - Prevents some valid changes

Decision



- Choose how and where to manage I/O configuration
 - z/VM
 - VM Configuration - CP commands and IOCP
 - Knowledgeable users
 - Easier and Faster
 - z/VM HCD and HCM
 - New users of z/VM
 - More controlled
 - Considerations
 - Cannot mix HCD / HCM with native CP commands
 - For the duration of an IPL
 - One-time switch from HCD / HCM to native CP commands is possible
 - Return to HCD / HCM requires POR
 - z/OS if the machine has z/OS LPARs or guests
 - z/VM can use the IODF generated by z/OS HCD
 - z/OS cannot use the IODF generated by z/VM HCD

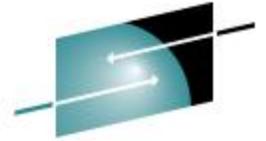

Differences

- VM Configuration
 - Each machine has a unique IOCP source
 - Special devices coded in SYSTEM CONFIG
 - Older devices that don't response to sense command
 - Devices that require additional configuration
 - Printers
 - Console information
 - Shared devices not identified
- HCD and HCM
 - All machines in a single view
 - Common IODF has software view for all
 - Shared devices identified
 - Additional information
 - Switch information

Advantages of HCD

- **Single point of control**
 - Hardware and software definitions both maintained with HCD; activated with data stored in IODF
- **Automatic lock-step approach**
 - After successfully performing dynamic changes in the running system, the changes are applied to the prospective IOCDS, written to the Support Element to be available for the next POR
- **Automatic backout and recovery capability**
 - If an error is encountered anywhere in the process, all changes are backed out.
- **Check consistency between hardware and software definitions**
 - Guaranteed via unique tokens

Elements of Dynamic I/O Configuration




- **SYSTEM CONFIG**
 - CMS file on the PARM disk
 - Enable Dynamic I/O
 - Specify IODF if using HCD to manage hardware and software
 - If not using HCD
 - I/O device definitions (software view of I/O)
 - Additional system-wide options

SYSTEM CONFIG HCD



- IODF statement
 - IODF*nn*
 - Name of the IODF file to be used
 - Filetype must be PRODIODF
 - Must reside on PARM disk
 - *osconfig*
Optional specification of VM I/O configuration in the IODF
 - *SYSTEM_CONSole*
 - Specifies that the Operating System Messages panel on the Hardware Management Console can serve as a system operator console.
 - Can only be used if *osconfig* specified
 - *SYSTEM_3270*
 - Specifies that the integrated 3270 console on the Hardware Management Console can serve as a system operator console.
 - Can only be used if *osconfig* specified
 - Specify only IODF*nn* to cause HCD management of only hardware I/O configuration

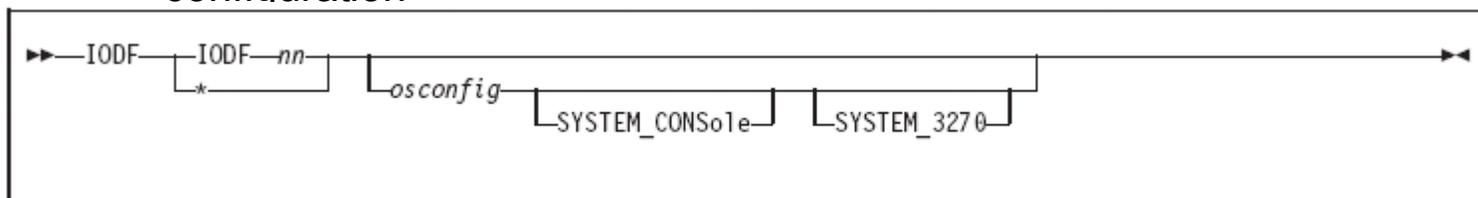

SYSTEM CONFIG HCD



- Statements always ignored when IODF specified
 - Subsequent IODF statements (i.e. only the first IODF statement remains valid)
 - FEATURES DISABLE/ENABLE DYNAMIC_IO
 - FEATURES DISABLE/ENABLE SET_DYNAMIC_IO
- Statements ignored when an IODF statement with *osconfig* is specified
 - RDEVICE
 - DEVICES ACCEPTED/NOTACCEPTED
 - DEVICES DYNAMIC_I/O/NOTDYNAMIC_I/O
 - DEVICES OFFLINE_AT_IPL/ONLINE_AT_IPL
 - DEVICES SENSED/NOTSENSED
 - DEVICES SHARED/NOTSHARED
 - HOT_IO_RATE
 - OPERATOR_CONSOLES
 - EMERGENCY_MESSAGE_CONSOLES
 - FEATURES DISABLE/ENABLE SET_DEVICES

SYSTEM CONFIG


CP Commands



- Features section
 - Enable and Disable sections
What functions can and cannot be used
- Recommended for Enable
 - Authorize users system-wide to use certain functions
 - SET_DYNamic_i/o, SET_DYNamic_io
Allow turning Dynamic I/O on and off
 - SET_DEVices
Allow changing the software view
 - Tell CP whether, and how, to activate certain system functions
 - NEW_DEVices_initialized_when_added
How to handle hardware MCH interrupts
- Recommended for Disable
 - Disable Hardware I/O Changes
 - DYNamic_i/o, DYNamic_io
Allow dynamic changes
 - Dynamic changes can be enabled with CP SET DYN ON when changes will be done

SYSTEM CONFIG extract

CP Commands

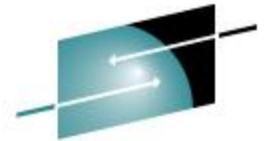

SHARE
Technology • Connections • Results

```
/*
*****
/*
Features Statement
*****
Features ,
    Enable ,                /* Enable the following features */
        SET_DEVICES,        /* Allow changing of devices bitmaps */
        SET_DYNAMIC,        /* Allow use of Set Dynamic On/Off Cmd */
        NEW_DEVICES_Initialized_When_added, /* Online at IO MCH */
    . . .

    Disable ,                /* Disable the following features */
        DYNAMIC_I/O,        /* Disable hdw i/o changes */

```

SYSTEM CONFIG

CP Commands



- I/O device definitions (software view of I/O)
 - Only necessary for devices which do not respond to sense ID
 - Alter default characteristics for specific devices
 - Printers
 - How to handle specific devices at initialization
 - Which devices to bring online at IPL time
 - How to handle hardware I/O interrupts
- Ignored if IODF is in use

SYSTEM CONFIG extract

CP Commands



SHARE

Technology • Connections • Results

```
/*-----*/  
/*   Special RDEV statements - things that cannot be sensed   */  
/*-----*/
```

```
Rdevice 0020-002D   Type  TELE2_ADAPTER  
Rdevice 002E       Type  BSC_ADAPTER  
Rdevice 002F-0030   Type  TELE2_ADAPTER  
Rdevice 0031-0038   Type  BSC_ADAPTER  
Rdevice 0039       Type  TELE2_ADAPTER  
Rdevice 003A-003F   Type  BSC_ADAPTER  
Rdevice 06F0-06FF   Type  3420 Model 8 Dual_Density Yes  
Rdevice 0D0C       Type  IMPact_Printer Afp No
```

```
VMTEST: VMSOUTH: Rdevice 0700-076F Type Tape  
VMTEST: VMSOUTH: Rdevice 0B00-0B40 Type Tape  
VMTEST: VMSOUTH: Rdevice 10A0-10AF Type 3270_display  
VMTEST: VMSOUTH: Rdevice 0EA0-0EBF Type Tape  
VMTEST: VMSOUTH: Rdevice 0EA0-0EBF Type Tape  
VMTEST: VMSOUTH: Rdevice 0C40-0C5F Type CTCA
```

SYSTEM CONFIG extract

CP Commands



SHARE
Technology • Connections • Results

```
VMB: VMTEST: Devices ,
  INITIALIZED_at_ipl 0000-FFFF,
  NOTINITIALIZED_at_ipl,
    A0C0-A0FF A1C0-A1FF A2C0-A2FF A3C0-A3FF, /* PAV */
    9000-9FFF,          /* RDC3 DS8100          */
    5000-5FFF,          /* FlashCopy targets          */
  Online_at_IPL 0000-FFFF,
  Offline_at_IPL 0020-0030 0033-0035 0037-003F, /* EP devices */
    0D07 0D0B-0D0E 0D90-0D97,          /* printers   */
    0881 0891 0883,                    /* LMU - EDC-N */
    0892 0893,                          /* LMU - RESS */
    A0C0-A0FF A1C0-A1FF A2C0-A2FF A3C0-A3FF, /* PAV */
    9000-97FF 9801-9FFF, /* RDC3 DS8100          */
    5000-5FFF,          /* RDC3 DS8100 FC targets */
  Sensed 0000-FFFF,
  NotSensed,
    A0C0-A0FF A1C0-A1FF A2C0-A2FF A3C0-A3FF, /* PAV */
    9000-97FF 9801-9FFF, /* RDC3 DS8100          */
    5000-5FFF,          /* RDC3 DS8100 FC targets */
  NOTACCEPTED,
    A0C0-A0FF A1C0-A1FF A2C0-A2FF A3C0-A3FF, /* PAV */
    9000-97FF 9801-9FFF, /* RDC3 DS8100          */
    5000-5FFF          /* RDC3 DS8100 FC targets */
```

Elements of Dynamic I/O Configuration




- Facilities for Enabling dynamic I/O configuration
 - Hardware
 - Software
- IOCP/IOCDS file
- Hardware and Software Functions and Commands
 - HCD and HCM
 - z/VM CP commands
 - Add/Modify/Delete Definitions
 - *Channel Paths, Control Units, I/O Devices*
 - Select or Change active IOCDS


Enabling Dynamic I/O on Hardware




- Supported on IBM processors since 9021 with VM/ESA Version 2 Release 1 (circa 1994)
- All models with a Hardware Management Console (HMC)
 - Customize Activation Profiles
 - Select your Processor profile
 - View the “Dynamic” 'tab'
 - Check the box for "Allow dynamic changes to the channel subsystem input/output (I/O) definition"

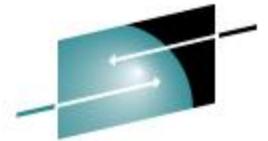


Enabling Dynamic I/O on Hardware

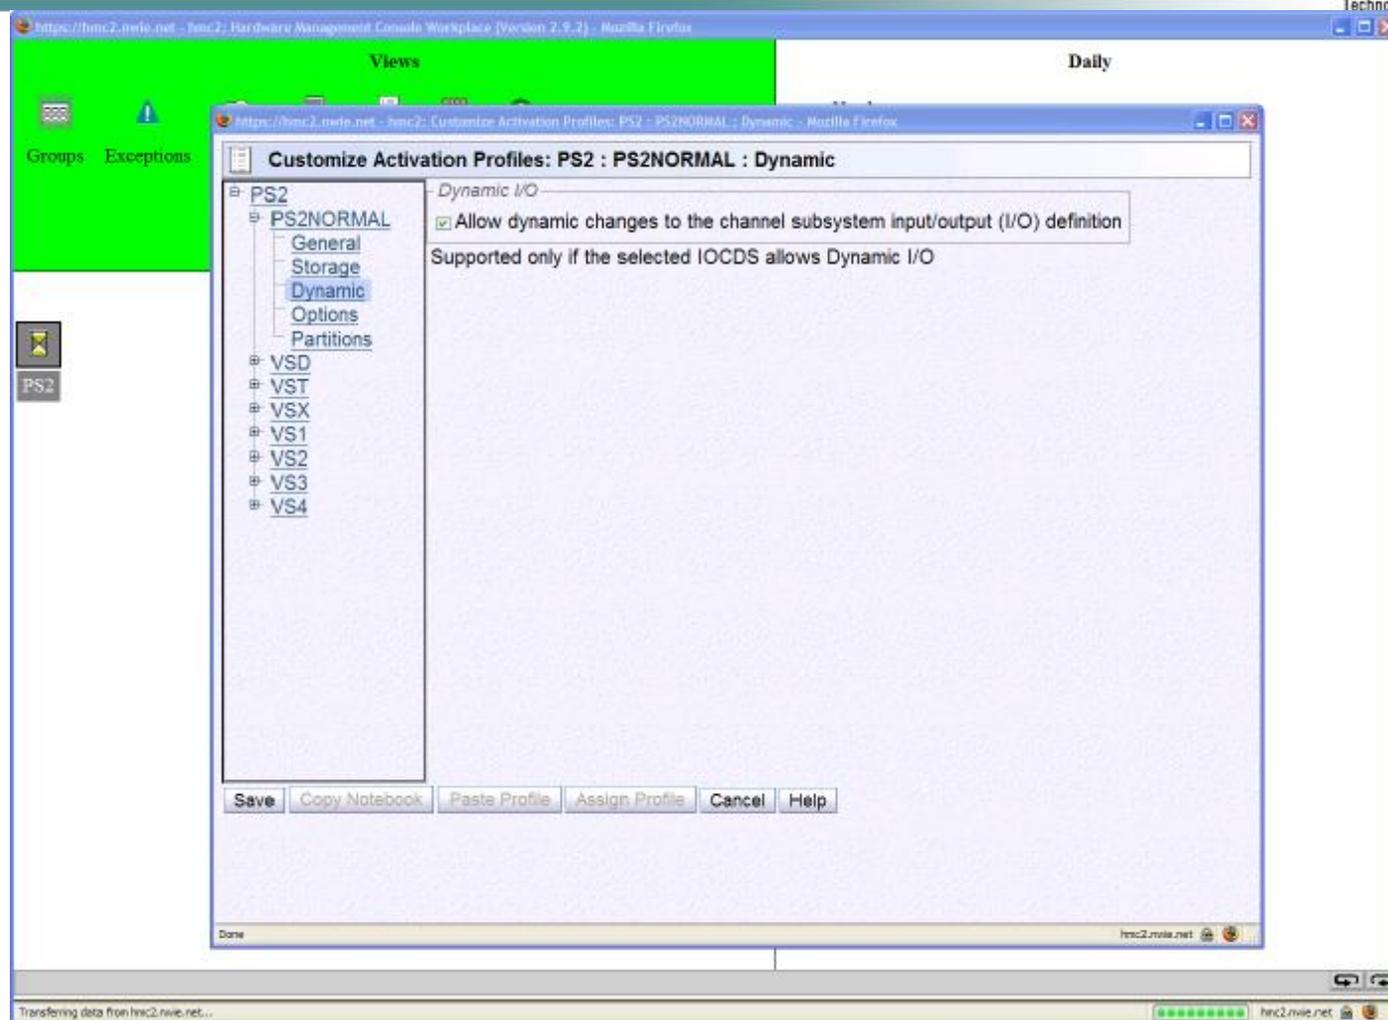

Note: This is a screen shot of the 2094 HMC panel.
SHARE 110 - Session 9134

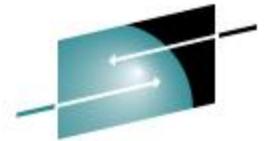

Enabling Dynamic I/O on Hardware

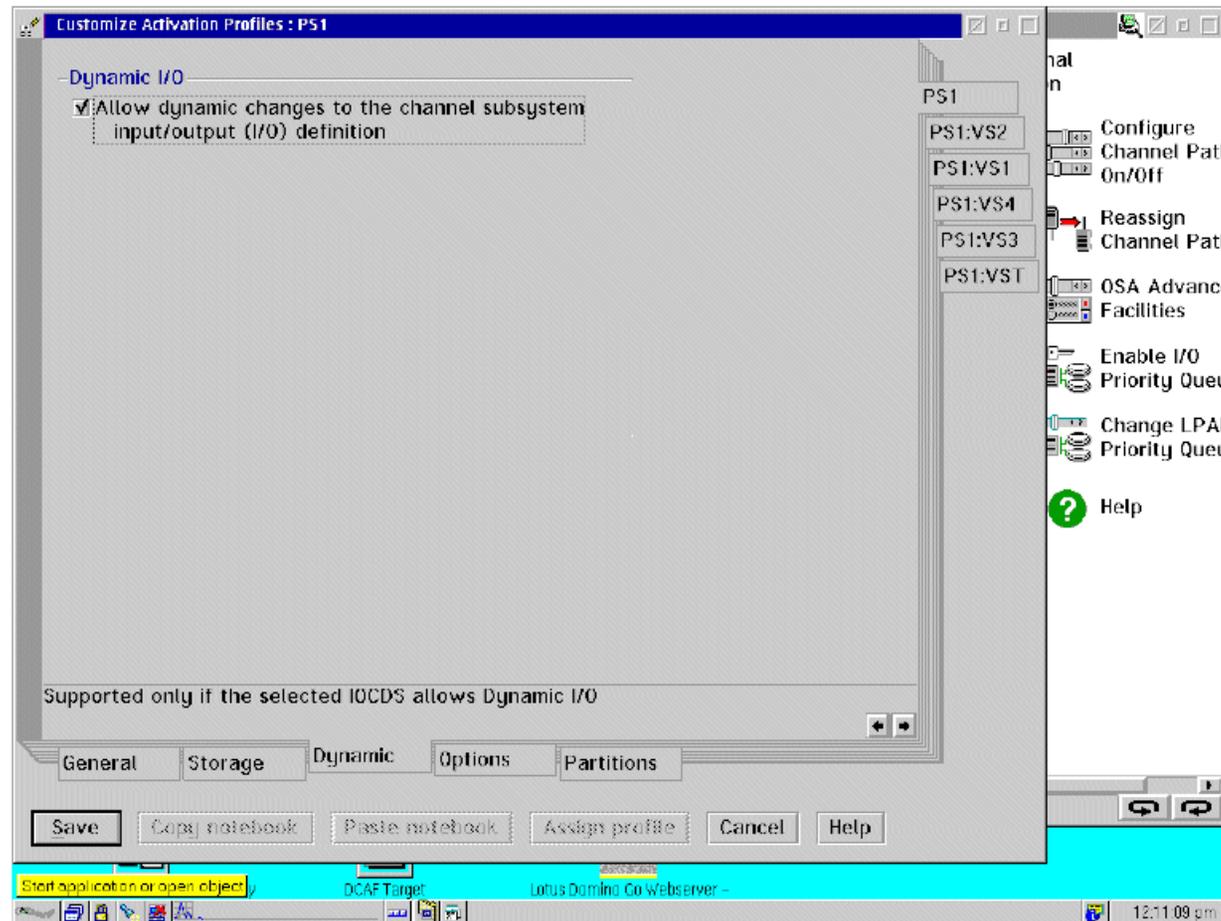


Note: This is a screen shot of the 2084 HMC panel.

Enabling Dynamic I/O on Hardware



- Allow **One** LPAR to Control I/O for Entire CEC
 - Choose which LPAR will “own” the configuration and make all changes from that LPAR
 - Hardware and software I/O configurations are synchronized using configuration tokens
 - VM LPARs can share tokens; z/OS and VM LPARs cannot
- All models with a Hardware Management Console (HMC)
 - Customize Activation Profiles
 - Select your LPAR profile
 - View the “Security” 'tab'
 - Check the box for "Input/output (I/O) configuration control"

Authorizing Dynamic I/O on Hardware; Allow One LPAR to Control I/O for Entire CEC

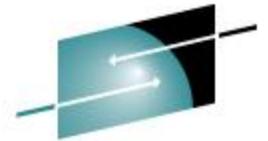

SHARE
Technology • Connections • Results

The screenshot shows the Hardware Management Console (HMC) interface. A dialog box titled "Customize Activation Profiles: PS2 : PS2NORMAL : VST : Security" is open. The left pane shows a tree view with "PS2" expanded, and "PS2NORMAL" selected. Under "PS2NORMAL", the "Security" option is selected. The right pane, titled "Partition Security Options", contains the following settings:

- Global performance data control
- Input/output (I/O) configuration control
- Cross partition authority
- Logical partition isolation

The dialog box has buttons for "Save", "Copy Notebook", "Paste Profile", "Assign Profile", "Cancel", and "Help". The background shows the HMC main interface with a green header and a "Views" tab.


Enabling Dynamic I/O in Software

- **SYSTEM CONFIG – HCD**
 - IODF IODF xx [OSCONFIG SYSTEM_CONSole SYSTEM_3270]
Specify IODF information to z/VM CP
- **SYSTEM CONFIG – CP Commands**
 - Features, Enable,
 - DYNamic_I/O, Allow hardware I/O changes
 - SET_DYNamic_io, Allow use of SET DYNamic ON/OFF command
 - SET_DEVices, Allow privileged users to reset CP's view of real devices
 - NEW_DEVices_initialized_when_added
CP will create a real device control block (RDEV)
when it receives an I/O machine check (IOMCK)

One Time Hardware Enablement



- Shutdown VM and all other systems on the processor
- POR (IML / Activate) the processor
 - Must be done once to activate an IOCDS with a VM TOKEN
 - Stand-Alone IOCP on all processors later than 9672 CMOS processors can write an IOCDS using a source file modified by the VM IOCP EXEC.

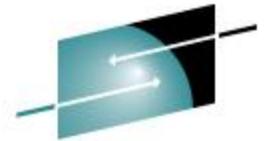

HCD File Relationship

- Work IODF
- HCD
- Production IODF
- HCD
- IOCS


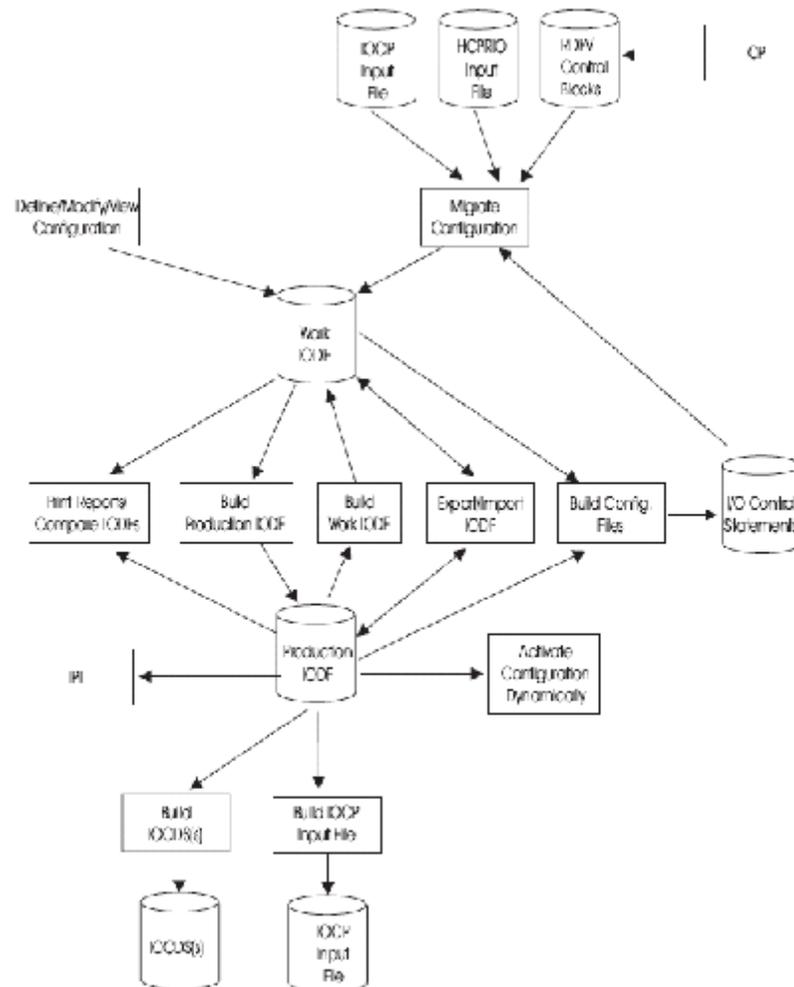


Figure 6. Relationship of Files Used by HCD

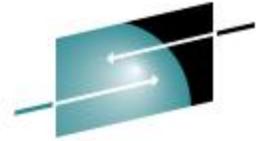

HCD Challenges

- How to copy / import IODF from z/OS
 - Use z/OS HCD to EXPORT IODF and send to VM
 - IODF will be in the correct format to import to VM HCD

- How to successfully import IOCP source

```
cbdsmigr iodf03 workiodf f machine1 iocp a i machine1 9672-x77 lpar
```

- Requires significant modifications to IOCP source to provide information required by HCD
- Tags not fully documented

IOCP / IOCDS Preparation

- **IOCP command syntax**

IOCP iocpname (DYN IxP WRTxxx LPAR DESC1 SYS1 DESC2 IODF00

- DYN indicates that the IOCDS will be written with a TOKEN that will be used after POR to prevent other LPARs from modifying the I/O configuration
- IXP is used to cause IOCP to write an IOCDS for an non-EMIF processor
- IZP is used to cause IOCP to write an IOCDS for an EMIF-capable processor
- IYP is used to cause IOCP to write an IOCDS for a z900 or z800 processor
- ICP is used to cause IOCP to write an IOCDS for a z990, z890 or z9 processor
- LPAR indicates that the IOCP contains multiple LPARs
 - Omit for z9 and later or older machine running in basic mode
- Include DESC1 and DESC2 if z/OS LPARs or guests will also be active

Safe Dynamic I/O




- Does not apply to HCD / HCM because HCD handles
- Dynamic I/O changes must be implemented in a careful process or you will not be able to activate a new IOCDs and all dynamic changes will be lost at a future machine POR.
- The designers call this a LOCKSTEP process.
 - Plug-and-Play mode available for the adventurous
- I recommend using an EXEC for all commands so that return codes can be checked and no further commands are executed.

Safe Dynamic I/O



- Update the IOCP source statements with proposed changes
- Run **IOCP EXEC** with NOWRT option to check syntax
 - Do not load or activate
- Issue CP commands to dynamically make changes
 - **NOTE:** If any command fails, keep track of what was completed. Either reverse the completed commands or fix the failed commands. Write either the old or a new IOCP to a new IOCDS and activate it.
- If commands complete successfully, run **IOCP EXEC** again with write option to create an IOCDS
- Issue **CP SET IOCDS_active** command to activate the new IOCDS
 - This will change the hardware pointer so that the new IOCDS is selected at a future POR.

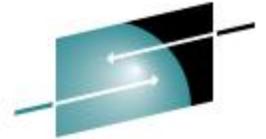

Hardware Token

- z/VM Token

Query TOKEN CURrent

```
HCPCC06816E Dynamic I/O changes are not allowed on this system
The current channel subsystem configuration token is:
VM-TOKEN11/03/0509:46:34      ....08/18/0523:32:53
```

Query TOKEN [TARGET]

```
HCPCC06816E Dynamic I/O changes are not allowed on this system
The target channel subsystem configuration token is:
VM-TOKEN11/03/0509:46:34      ....08/18/0523:32:53PSYS      IODF03
```


- z/OS Token

Query TOKEN [TARGET]

```
HCPCC06816E Dynamic I/O changes are not allowed on this system
The target channel subsystem configuration token is:
P4          .....d.....06-02-1714:07:59PSYS      IODF05
```

Verify Dynamic is Enabled


- Verify that Dynamic I/O changes are allowed
Query DYN
Dynamic I/O changes are not allowed on this system
- Why?
 - Features Disable DYNamic_I/O is in my SYSTEM CONFIG
 - Enable it:
CP SET DYNamic ON
System is now enabled for dynamic I/O changes
- Verify that Dynamic I/O changes are allowed
Query DYN
Dynamic I/O changes are allowed on this system

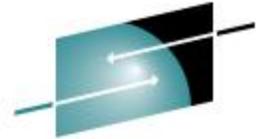

IOCP Statements

- CHPID Statement


```
[symbol]    CHPID    PATH=(chpid number [, chpid number] ...)  
            TYPE={BL | BY | CBY | CVC | CNC | CTC | CFP | CFR | CFS |  
                  CBP | CBR | CBS | ICP | OSA | OSD | OSE | FCV |  
                  FC | FCP | IQD}  
            [SWITCH=number]  
            [PART={{(name | 0 [, REC]) |  
                  (access list) |  
                  ((access list) [, (candidate list)] [, REC])}}]  
            [PARTITION={{(name | 0 [, REC]) |  
                        (access list) |  
                        ((access list) [, (candidate list)] [, REC])}}]  
            [NOTPART={{(access list) |  
                      ((access list) [, (candidate list))}}]  
            [SHARED]  
            [CPATH=(chpid number [, chpid number] ...)]  
            [OS=value]  
            [IOCLUSTER=name]
```

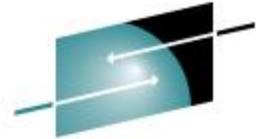

IOCP Statements

- CNTLUNIT Statement


<i>[symbol]</i>	CNTLUNIT	CUNUMBR = <i>number</i> PATH =(<i>chpid</i> [, <i>chpid</i>]...) [LINK =(<i>link address</i> [, <i>link address</i>]...) [CUADD = <i>address</i> [PROTOCL ={ D S S4 } SHARED ={ Y N } UNIT = <i>type</i> UNITADD =(<i>(address</i> [, <i>number</i>]...)
-----------------	-----------------	--

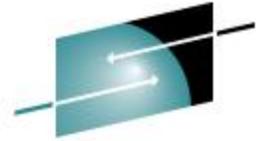

IOCP Statements

- IODEVICE Statement


```
[symbol]  IODEVICE  ADDRESS=(address[,number])
           CUNUMBR=(number[,number]...)
           [MODEL=model]
           [{PART | PARTITION | NOTPART}=(name[,name]...)]
           [PATH=chpid]
           [TIMEOUT={YIN}]
           UNIT=device
           [UNITADD=address]
           [STADET={YIN}]
```

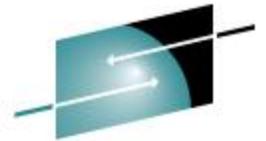

IOCP Statement Relationship


```
CHPID00  CHPID  PATH=(00),TYPE=CNC
DASDCU01  CNTLUNIT  CUNUMBR=0001,PATH=(00),UNIT=3390
DASD0001  IODEVICE  ADDRESS=(1000,256),CUNUMBR=(0001),
           STADET=Y,UNIT=3390
```

Red annotations: A red arc connects the 'PATH=(00)' in the first line to the 'PATH=(00)' in the second line. A red line connects the 'CUNUMBR=0001' in the second line to the 'CUNUMBR=(0001)' in the third line.

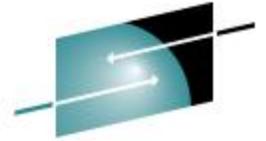

Conclusions

- When z/OS is present, let z/OS maintain IOCDs and let z/VM sense hardware changes
- IOCP and Native VM commands simpler for experienced user
 - No safeguards
- New to z/VM à use HCD and HCM
 - Lack of examples
 - Limited customer exploitation
 - Complex processes

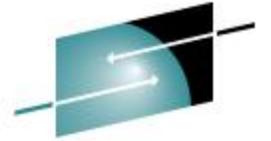


SHARE

Technology • Connections • Results

Questions?

VM Dynamic Examples

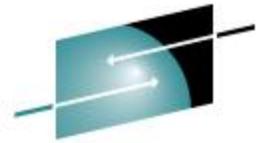

References

- **HELP DYNIO**

Change specific device handling after initialization

Change the definition of an existing CHPID

Change the definition of an existing control unit

Change the definition of one or more existing
real devices

Change the IOCDs file used during the next POR

Define a new channel path identifier

Define a new control unit

Define one or more new real devices

Delete an existing channel path identifier

Delete an existing control unit

Delete one or more existing real devices


Enable or disable the ability to dynamically change
the processor's I/O configuration

Turn configuration mode on or off

Bibliography



- Library bibliography **HELP LIBRARY**
- Pointer to VM publications from <http://www.vm.ibm.com/library>
- z/VM I/O Configuration V5R3 SC24-6100-02
- z/VM CP Messages and Codes V5R3 GC24-6119-04
- z/VM CP Planning and Administration V5R3 SC24-6083-04
- z/VM CP Commands and Utilities Reference V5R3 SC24-6081-04

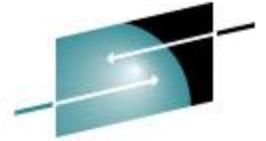

SHARE
Technology • Connections • Results

Bibliography

- System z9 Business Class and Enterprise Class and ERserver® zSeries 890 and 990 Input/Output Configuration Program User's Guide for ICP IOCP SB10-7037-05 (Level 05a, September 2006)
- Hardware Management Console Operations Guide *

* You will need to get the correct manual for your CPU model and SEC.


Contact Information



Rick Barlow
Systems Engineering Consultant


Phone: (614) 249-5213

Internet: Richard.Barlow@nationwide.com

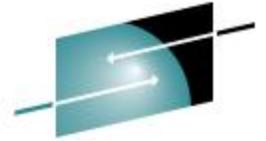


CP Commands

- CP Query
 - DYNAmic_i/o or DYNAmic_io [STATus]
 - Determine whether the dynamic changes are currently allowed
 - DYNAmic_i/o or DYNAmic_io STORAge
 - Display how much storage is available for dynamic changes
 - CHPIDS
 - Display the machines 256 possible channel paths and their physical status
 - CHPID yy
 - Display the status of all devices defined on a specified channel path
 - PATHS [TO] rdev rdev1-rdev2
 - Display all paths to a device or range of devices and the path status
 - TOKEN
 - Display the Current or Target configuration token

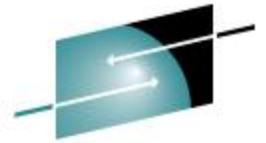


CP Commands

- **CP SET**
 - **DYNAMIC_i/o or DYNAMIC_io ON | OFF**
 - Enable or disable CP's ability to make dynamic changes
 - **CONFIGmode ON | OFF [RESET]**
 - Place the processor in configuration mode
 - This can be done before doing a group of dynamic changes. However, individual command return codes cannot be captured.
 - The RESET option tells CP to enter or exit configuration mode even if there is a mismatch between the software and hardware view of the I/O configuration.
 - **NEW_DEVICES INITIALize_when_added ON | OFF**
 - Tells CP whether to initialize devices when I/O MCH is received.
 - **IOCDS_active An | Bn**
 - Change the IOCDS that the processor will use during the next POR
 - **TOKEN**
 - Update the configuration token description fields

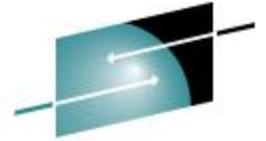

CP Commands

- CP VARY
 - Online | OFFline CHPID nn [FORCE]
 - Enable or disable hardware paths to devices
 - ONline | OFFline PATH yy [TO|FROM] rdev|rdev1-rdev2|ALL
 - Enable or disable a logical path to devices
 - ONline|OFFline rdev|rdev1-rdev2
 - Enable or disable the device
 - ONline|OFFline SUBchannel rdev|rdev1-rdev2
 - Enable or disable one or more subchannels
 - This is required before deleting a device.

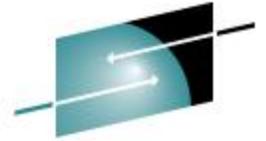

CP Commands

- **CP DEFINE or CP DELETE**
 - **CHPID|PATH**
 - Add/delete a channel path identifier (CHPID) to/from the configuration
 - **CU|CNTLUNIT**
 - Add/delete a control unit to/from the configuration
 - **DEVICE|IODEVICE**
 - Add/delete a device to/from the configuration
- **CP MODIFY**
 - **CHPID|CU|DEVICE**
 - Change some characteristic of an existing CHPID, CU or DEVICE